



ROADS MUST BE BUILT. WORLDS MUST BE CONNECTED.


- ROPS-mounted Work Lights
- Magnetic Mount Strobe

ROPS-mounted Work Lights









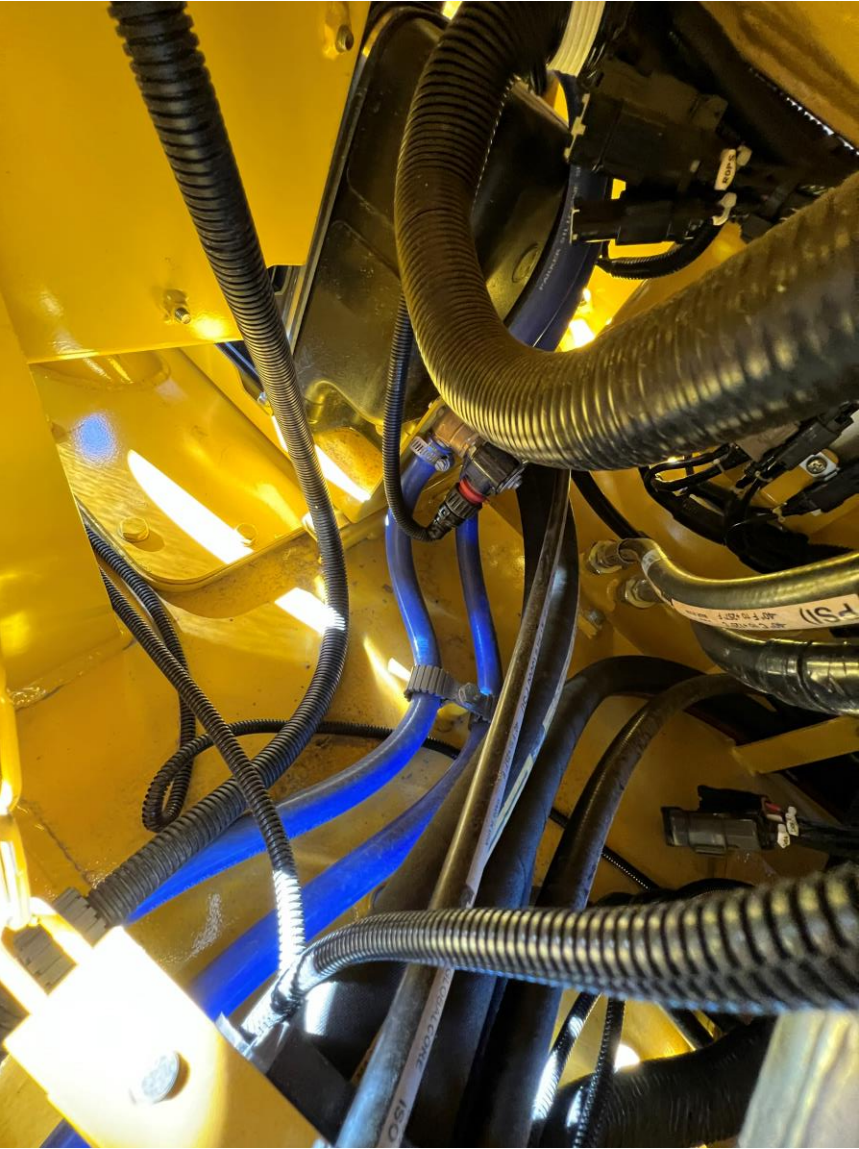




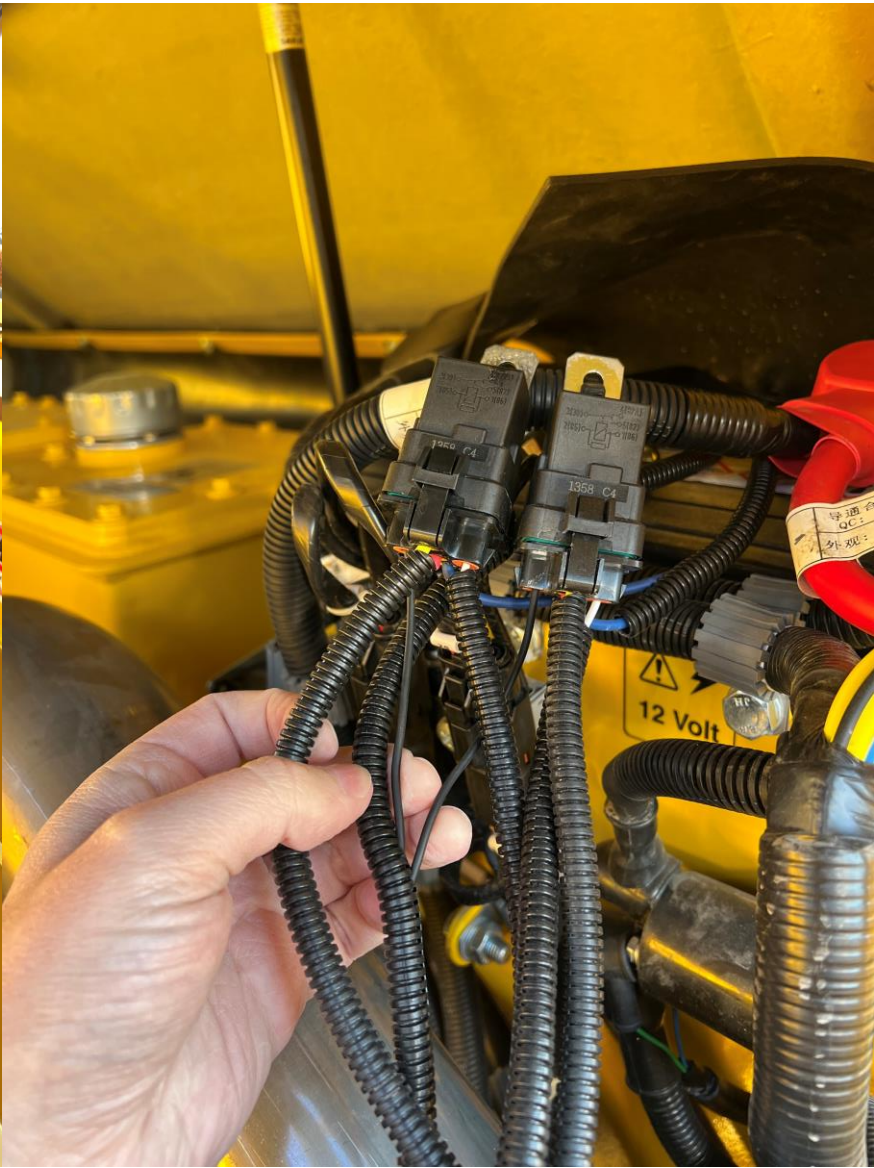

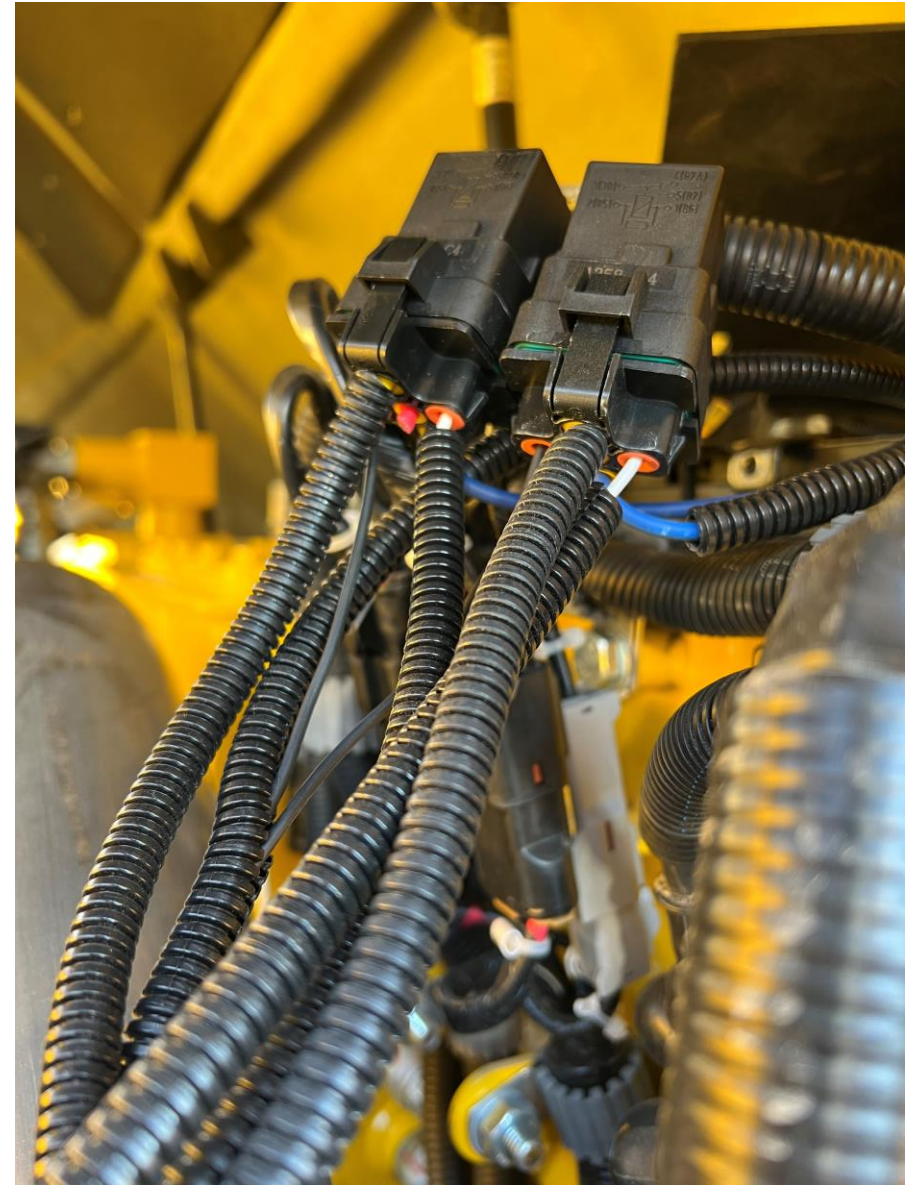




Runs back from relay to deck and up to the button switch

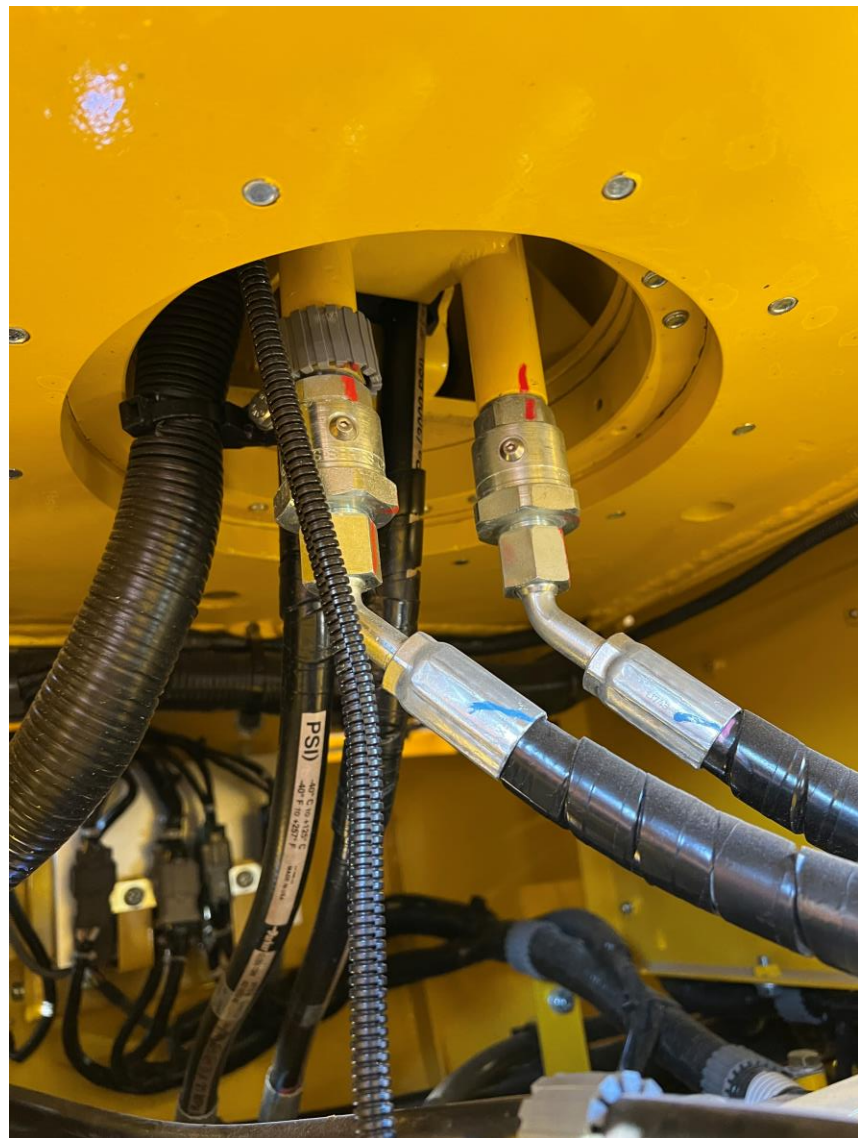





Left button ROPS Lights
(typical factory install)

Magnetic Mount Strobe – Wired to Grey Plug Behind Fuse Panel

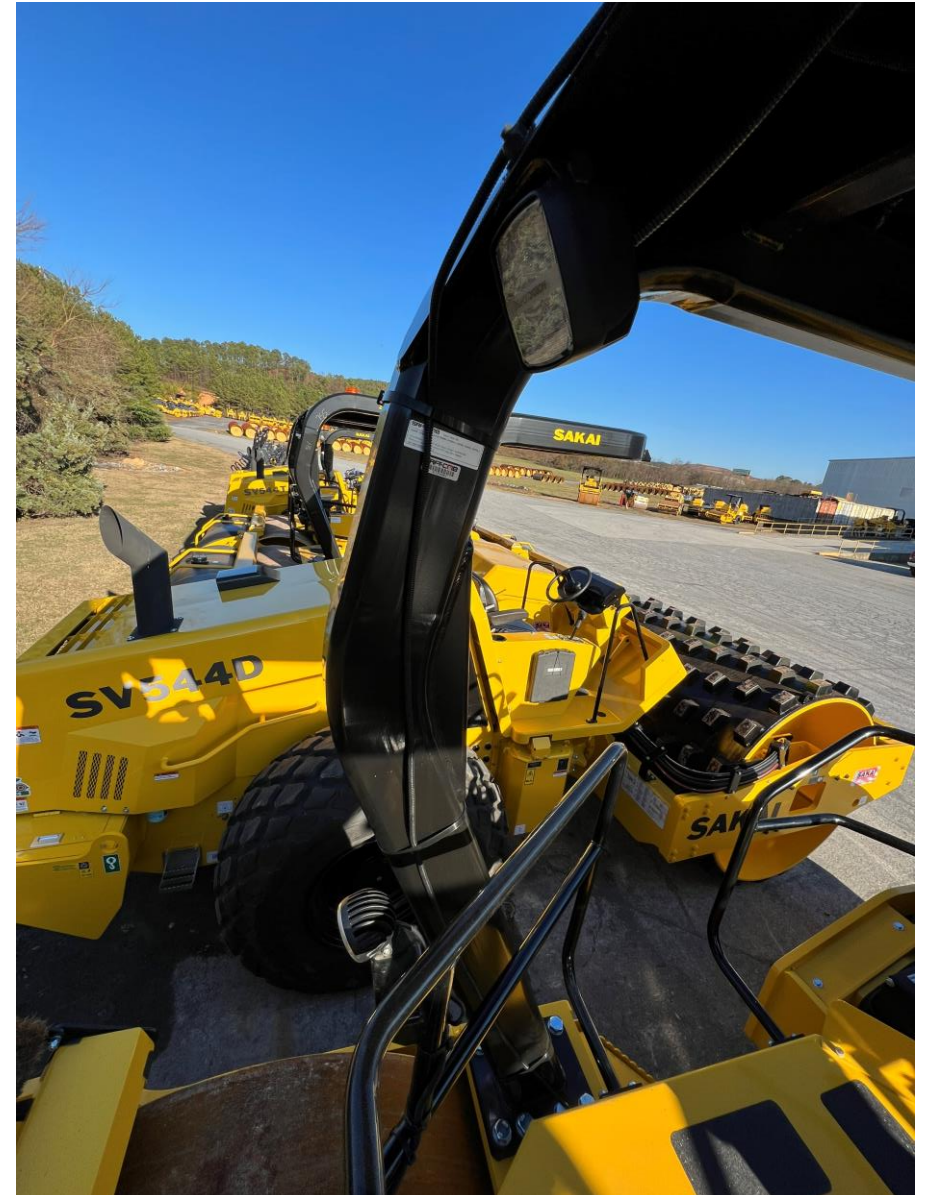



Wired Under Deck to Grey Plug Behind Fuse Panel + Grounded to Nearby Bolt

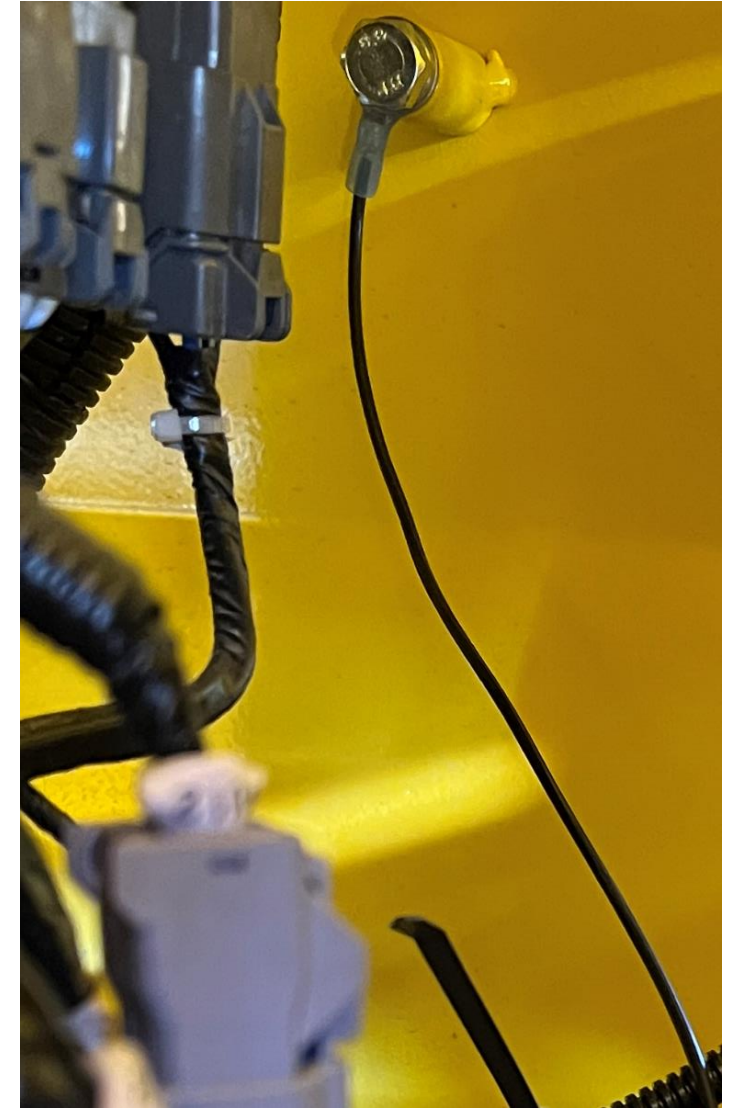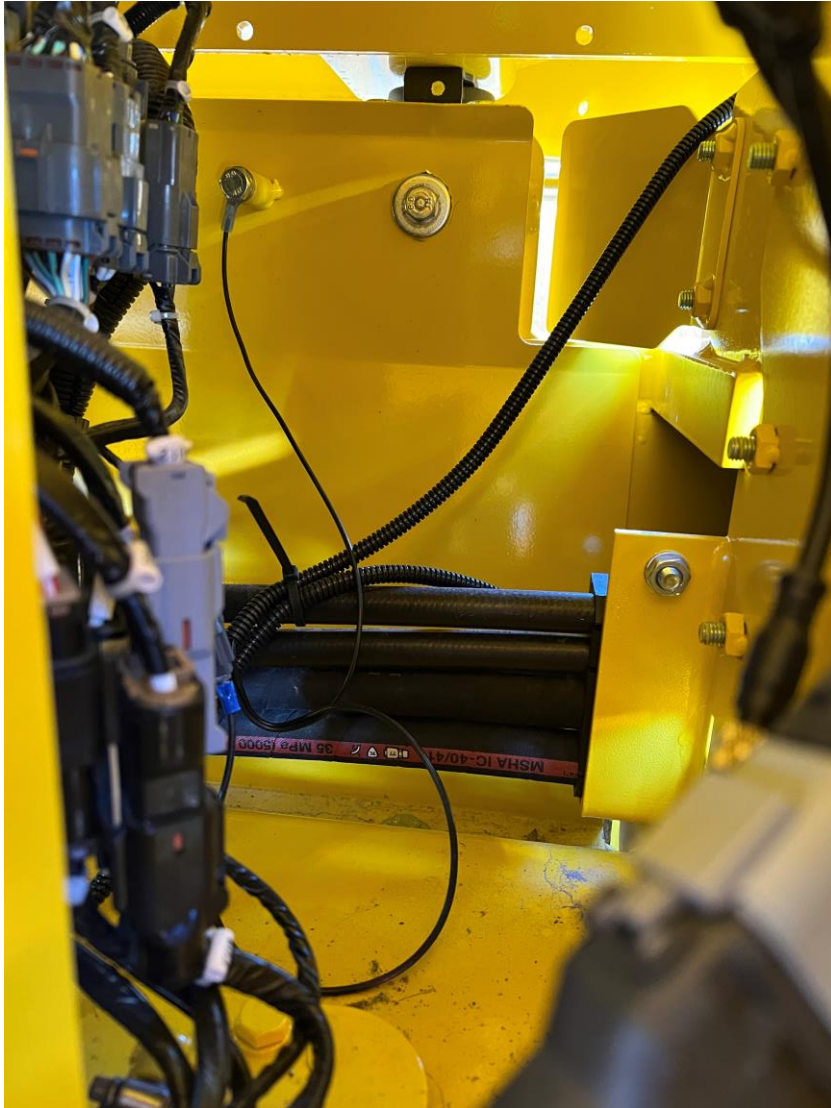

Thank you. Questions?

SakaiAmerica.com

Follow us:

